Operating and mounting instructions

PowerBlock o8

Order number: 77024-180-01

General usage

Power Block series consists of different devices types. It can be installed in a standard distribution board.

- 4 DIN Rail module for 4 outputs and 6 inputs
- 4 DIN Rail module for 8 outputs
- 4 DIN Rail module for 8 inputs 230 VAC
- 4 DIN Rail module for 4 Blinds/Shuter 24 VDC
- 8 DIN Rail module for 8 outputs and 8 inputs
- 8 DIN Rail module for 16 outputs





Overview of the functionalities:

SHUTTER / BLIND
Bus failure
Scenes
Presets
Alarms
Disable function
Manual control

ADVANCED FUNCTIONS	
Analog & digital alarms	Logic functions
Scene controller	Advanced scene controller
Timers (with cyclic sending of	Setpoints
time remaining)	Behavior at bus recovery DPTs obj
Overwrite end user parameters	,
,	

Device type and accessories

At present the following device types are available in the PowerBlock control group:

Product	Description	Order number:
PowerBlock o8	8 capacitive outputs	77024-180-01
PowerBlock o8m	8 capacitive outputs	77024-180-04
PowerBlock o16	16 capacitive outputs	77024-180-02
PowerBlock o16m	16 capacitive outputs	77024-180-05
PowerBlock io64	4 capacitive outputs + 6 analog / digital inputs	77024-180-03
PowerBlock io88	8 capacitive outputs + 8 analog / digital inputs	77024-180-07
PowerBlock s4 DC	4 Jalousie Ausgänge 24VDC	77024-180-11
InBlock i8 HV	8 x 230VAC inputs	77024-180-30

Scope of delivery

The following individual components are included in the delivery of the PowerBlock device:

- KNX Actuator
 - KNX bus connector
- KNX protection cap
- Operating and mounting instructions

Application programs

The following application program is currently available for the PowerBlock device:

77024-PowerBlock o8-11-0111 – Version 1.1

Installation device





Risk of death by electric shock.

- The device is intended for interior installation in dry rooms.
- The device must only be installed and commissioned by an accredited electrical engineer.
- When planning and installing systems, the guidelines, rules and regulations, as well as the valid KNX guidelines of the respective country must be observed.
- For the installation the device must be switched to zero potential.
- The device must not be opened.
- Any faulty devices are to be sent together with a return delivery to the manufacturer.


Technical data

POWER AND OUTPUTS SPECIFICATIONS		
	KNX Supply Voltage:	2130VDC
Power supply	Max. Consumption:	9,4mA
	Additional power	
	supply:	No
Number of	Contacts:	8 Dry contacts
outputs		(potential-free)
Output		Up to 8 outputs,
configuration		Up to 4 channels
Maximum	AC rated current /	
switching	voltage:	16A / 230VAC 50/60Hz
capacity per	Capacity Load:	max. = 140µF
output	DC rated current /	
	voltage:	16A / 30VAC
Maximum	max. 200µs:	800A
inrush current	max. 20ms:	165A
per output		
	Resistive:	2500W
	Incandescent lamps:	2000W
	Halogen lamps 230V:	2000W
Maximum load	Flurescent lamps uncorrected / not	
per output	compensated:	1000W
	LED lamps:	400W
	Motor power:	1380W
Max. total	Wotor power.	130077
current of the		60A
actuator		
Phases		1 independent phase
switching		allowed per conector side,
distribution		one above and one below
	Mechanical:	$> 1x10^6$ operations (at 60
Output life		times/min)
expectance	Electrical:	$> 4x10^4$ cycles with resistive
		load at maximum current
	KNX bus connector:	0,8 mm Ø solid
Connections	Terminal screw block:	Max. 6 mm Ø solid
	Tightening torque for	
	terminal screw:	Maximum 0.6 Nm

GENERAL SPECIFICATIONS		
	Programming button:	To assign the physical
		address
Control and	LED, red:	Displays addressing mode
display	8 x buttons: (for	To switch On/Off outputs /
elements	manual channels	Move Up/Down channels
	control)	
	8 x LEDs, red:	To display actual
	550 : 455	outputs/channels status
	REG casing 4TE:	Plastic ABS – V0
	Width:	71 mm
Mechanical	Hight:	58 mm
data	Lenght:	90 mm
	Weight Mounting:	235 g 35 mm DIN rail
	Pollution class:	2
Electrical	Protection type:*	IP20
safety	Protection class:**	III
Salety	Overvoltage category:	
	KNX Bus:	SELV DC 30V
EMC	Complies with:	EMC directive 2014/30/EU
requirements		
	Weather resistance:	EN 50090-2-2
	Environmental con-	
	ditions in operation:	-5°C to +45°C
Environmental	Storage emperature:	-25°C to +55°C
conditions	Transportation	
	temperature:	-25°C to +70°C
	Rel. humidity:	5 % to 93 %
	(non condensing)	
Certification	KNX registered:	Yes
CE-Signage	According to EMC-	(Residential and
	Guidelines:	commercial buildings), Low
		Voltage guidelines

^{* (}according to EN 60529); ** (according to IEC 1140)

Location and function of the LEDs and control elements

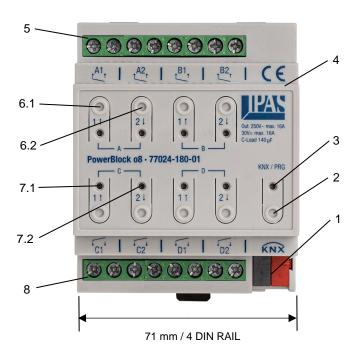

- 1: KNX bus connector
- 2: Programming button
- 3: Programming LED
- 4: SD card slot (only for internal use)
- 5: Outputs connector above: Channel A, B

6.1: Manual control (See Annex 1)

Blind channel:

- Long press: Move Up (LED blinks while moving)
- Short press: Stop/Step
- Binary channel:
- Short press: Output toggles to ON/OFF

6.2: Manual control (See Annex 1)

Blind channel:

- Long press: Move Down (LED blinks while moving)
- Short press: Stop/Step

Binary channel:

- Short press: Output toggles to ON/OFF

7.1: LED output/channel status

Binary channel LED ON = Output ON, LED OFF = Output OFF / Shutter: LED blinks while moving UP

7.2: LED output/channel status

Binary channel LED ON = Output ON, LED OFF = Output OFF / Shutter: LED blinks while moving DOWN

8: Outputs connector below: Channel C, D

Mounting and wiring

As an REG device, the Power Block series are suitable for mounting in distribution boxes on 35 mm DIN rails and wall boxes.


To mount the device, it must be angled to slide onto the DIN rail from above and then locked into place with a downward movement.

Please make sure that the security latch at the bottom side of the device snaps into place and that the device is firmly attached to the rail. To dismount the device, the security latch can be pulled downwards with a suitable tool and then the device can be removed from the rail.

After the device has been inserted, the cables for the Outputs should be attached to the upper and lower connectors.


To connect the KNX cable, a standard KNX bus terminal and a protection cap are included with the device.

Please make sure that the KNX cable is installed with the protection cap as shown in the drawing below.

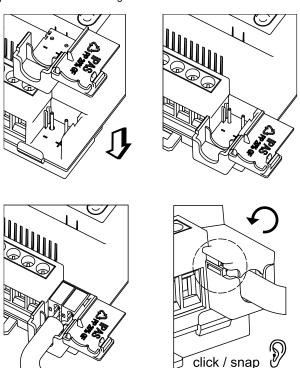

OUTPUT SCHEMATIC

Each channel can be configured to be used as 2 binary outputs or as one blind channel. Each connecting side (above and below) can be powered by an independent phase. The example circuit diagram uses 1 phase for the output channels A and B and 1 phase for channels C and D.

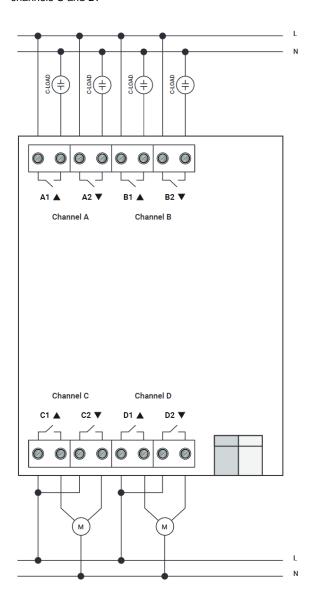

ANNEX 1: Manual Control

The Power Block actuator has 2 push buttons and 2 status LEDs for each channel on the front side. These buttons can be activated to control each and every channel/output individually if you select "yes" in the relevant parameter options in Binary outputs and/or Shutter/Blinds. The LEDs are arranged in two rows, whereas the LEDs represent:

For Binary outputs:

- The top row: channels A1,A2,B1,B2
- The bottom row: channels C1,C2,D1, D2

For Shutter/blinds:

- The top row: A1 -> UP, A2 -> DOWN, B1 -> UP, etc.
- The bottom row: C1 -> UP, C2 -> DOWN, D1 -> UP, etc.

MANUAL CONTROL - PARAMETER

The Parameter Mode allows you to control all the channels of the actuator as configured in the ETS. The Action simulates a telegram received at the switching object of the selected channel.

BINÄRY	SHUTTER/BLIND
Press action: Sends Toggle ON/OFF command "0/1" to the "Switching" object.	Long press action (Channel output 1): Sends a UP command "0" to the
	"Move" object.
	Long press action (Channel output 2):
77	Sends a DOWN command "1" to the "Move" object.
LED = ON (indicates	Short press action (any output)
channel status)	(while shutter/blind is moving) of same button:
	Sends a Stop command to the "Stop" object.
LED = OFF (indicates channel status)	LED blinks while moving UP/DOWN during parameterized time.

MANUAL CONTROL - TEST

The Test Mode allows you to test all the loads/wiring connected to the channels. It is independent from the ETS configuration of the actuator (since the "Manual Control / Param mode + Test mode" is a default option, you can use the Test mode even before programming the actuator).

Important note: Should a blind/shutter be connected to a channel, the 2 channels may never be closed at the same time. Therefore, even in Test mode, if the channel is configured as a blind, this safety measure is implemented. For this reason, it is better to first commission the OUTPUT: CHANNEL TYPE SELECTION before using the Test mode.

To change into the test mode, any button can be used depending of the channel configuration:

- If "Binary" channel is configured: Press any button for at least 500ms
- If "Blind" channel is configured: Press the two buttons of any channel at the same time for at least 500ms

To change back to the normal "Parameter Mode" the same procedure should be repeated. Be aware by changing back to "Parameter Mode" the device will restart. Also after the device has restarted and if the channel is configured to be a blind channel, it will do a calibration movement on the first movement command.

In order to indicate that the actuator is in Manual Control / Test Mode, the LED of the selected channel is continuously making a short blinking action every second; no matter whether the channel is ON (LED ON) or OFF (LED OFF).

The Action switches/moves the channel, as you can see in the table below:

BINÄRY	JALOUSIEN/BLENDE
Press action: Sends toggle	Rising edge press action
ON/OFF command to the relay	(Channel X): Contact closed
(ON = Contact closed / OFF =	Falling edge press action
Contact open)	(Channel X): Contact open
LED = ON (indicates channel status) LED = OFF (indicates channel status)	LED = ON (indicates channel status) LED = OFF (indicates channel status)